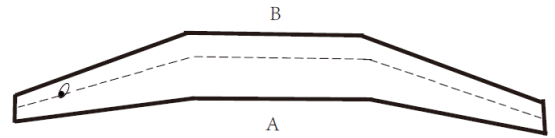# Window Sealing Kit
For portable A/C installation

1. First open the window and clean all surfaces where the Velcro strap should be attached. Clean the surfaces of the frame and casement so there is no dust and grease. Open the Velcro tape's self-adhesive part, attach it to the window casement.
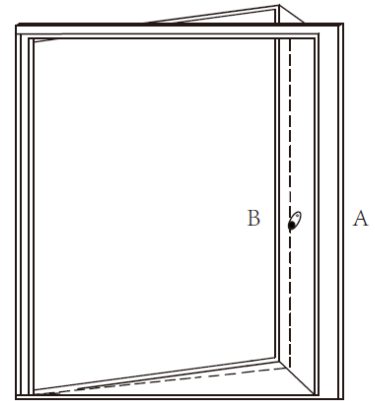
NOTE! Never attach the Velcro to the window seal strip.
The window should still be able to close.

2. Attach the velcro strap to the (side A) window casement inside or outside. The side where the handle is.
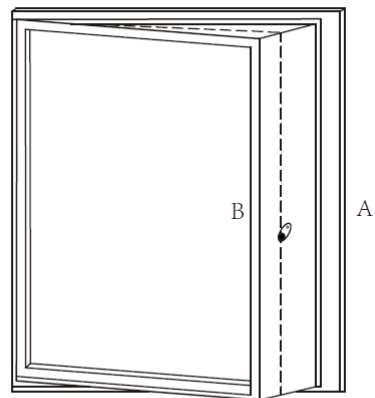**NOTE! Make sure that the window can still be closed without damaging the Velcro on the frame or window casement.**

3. First attach the wide part (side A) of the sealing cloth (zipper closed) with the window open. Start in the middle and then attach left and right or up and down on the window frame.

4. Close the window and make sure that the Window sealing kit does not fold or become squeezed.

5. Attach the narrow side B (zipper closed) from the center to the left and right or up and down on the casement.

6. Open the window slightly and pull out the vent hose through the Window sealing kit using the zipper.

7. Window sealing kit is now ready to use.